



PRODUCT FEATURES

- Super bright 1600 lumen 6500k white LEDs
- Easy twist smooth dimming switch
- White spot beam & flood beam LEDs
- Red LEDs for night vision & emergency/signalling
- 60° Rotating head angle
- Adjustable non-slip silicone lined headbands
- Smart Memory - remembers last white mode used
- IPX5 water resistant
- Hard-shell protective zipped storage case included
- 1m High quality USB-C Charging cable included
- 2 x 21700 5000mAh Li-ion batteries
- Parallel circuitry (can run on 1 or 2 batteries)
- Useful battery level & charging indicators
- Fast 5V-3A USB-C charging - 5 hr charge time
- Battery pack can be completely detached & used as an independent powerbank (5V-3A output)
- Each 21700 battery is also its own independent power bank


BATTERY - 2 x 3.7v 21700 5000mAh Li-ion

DIMENSIONS - Headtorch: 40 x 65 x 35.5 mm

Battery Pack: 50 x 106 x 30 mm

WEIGHT - 392g (with 2 batteries)

OPERATING INSTRUCTIONS

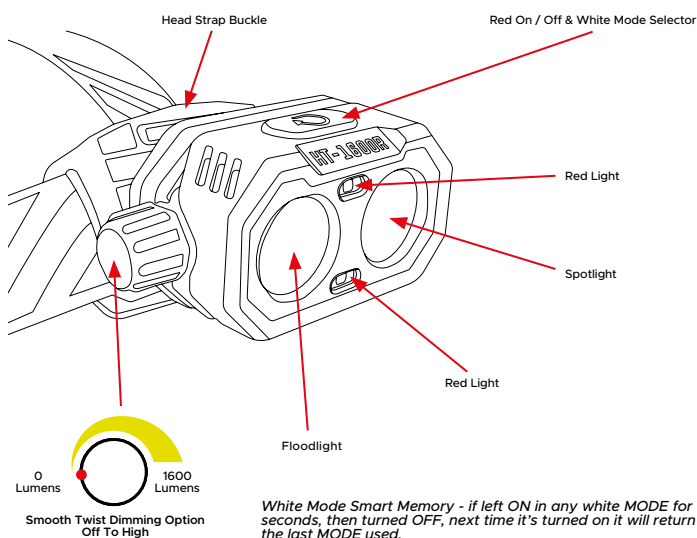

ANSI FL1 Standard




SPOT & FLOOD - HIGH		1600 Lumen	125M	8H
SPOT & FLOOD - LOW		150 Lumen	41M	25H
SPOT - HIGH		900 Lumen	128M	11H
SPOT - LOW		85 Lumen	40M	38H
FLOOD - HIGH		700 Lumen	35M	11.5H
FLOOD - LOW		65 Lumen	11M	38H
RED - HIGH		10 Lumen	8M	28H
RED - FLASHING		10 Lumen	-	32H

*These runtimes are based on using 2 x Unilite 21700 5000mAh Li-ion batteries. Using 1 battery will reduce runtimes.

RECHARGING THE BATTERY PACK / POWERBANK


1. Only use a 5V USB-C cable (max 3A)
2. Lift the charging port cover on the top of the battery pack.
3. Plug the USB-C end of the cable into the charge port.
4. Plug the USB-A end of the cable into a USB charging source (do not exceed 5V 3A charging input or damage may occur).
5. 4 x Blue LEDs will flash to indicate charging status. All 4 LEDs will light up constantly to confirm the batteries are fully charged.
6. Charge Time: 5 hrs

Warranty void if not used with the specified cable & max input

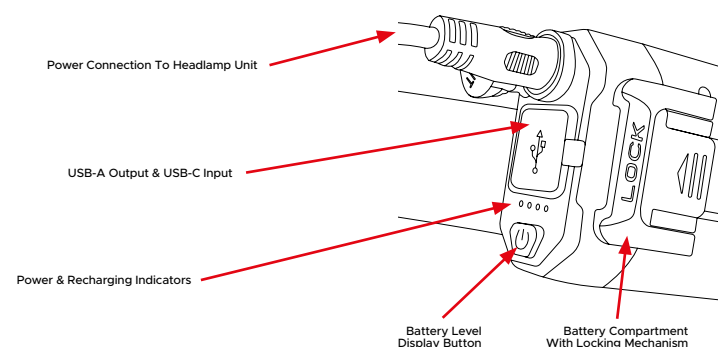


RECHARGING THE 21700 BATTERIES


You can recharge the 21700 batteries outside of the lamp. This enables spares to be kept on hand if you require light for an extra long period. Once plugged in, a Red light will appear on the top of the battery to confirm charging. Once fully charged it will turn Green.

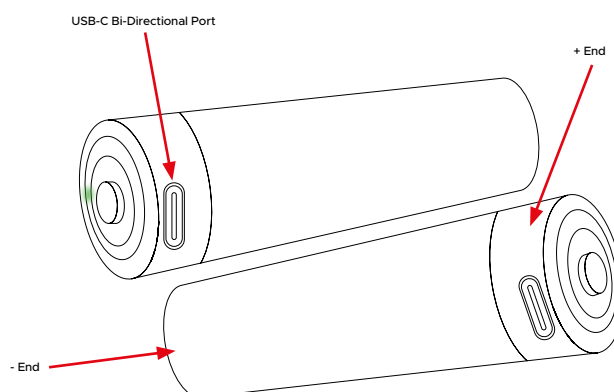

HOW TO REMOVE THE BATTERY PACK FROM THE HEADSTRAP

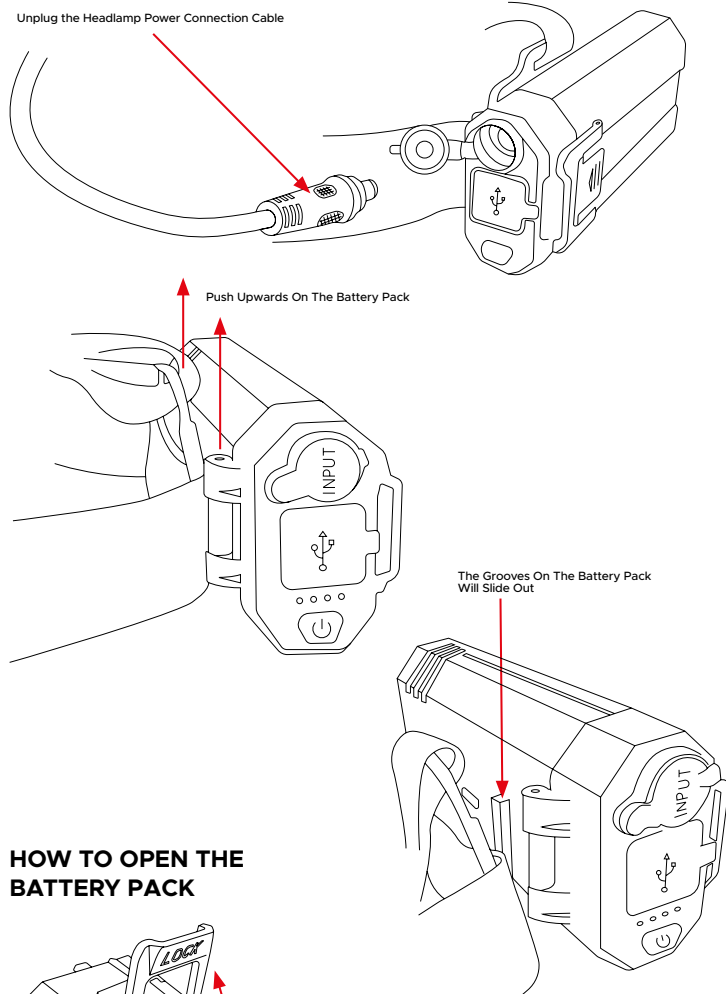

HOW TO OPEN THE BATTERY PACK

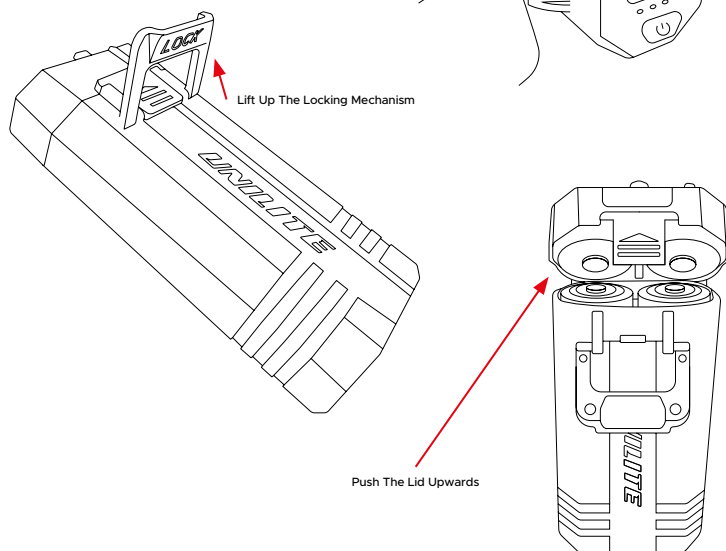

ADVICE & IMPORTANT INFORMATION!

- Do not look directly at LEDs.
- Do not operate in direct sunlight or extreme temperature conditions (below -20°C or above 60°C).
- LEDs can become warm/hot when switched on; DO NOT touch and NEVER place face down on any surface – risk of fire! Even once the device has been switched off, DO NOT place face down as the LED/Lens will stay hot/warm for a while.
- Do not use the device if there is any visible damage.
- Do not use the device in the immediate vicinity of flammable materials or gases.
- Take care when charging, check the charging output on the charging source you are using and DO NOT exceed the stated Max charging input or damage may occur to the battery and may void the warranty.
- The rechargeable battery will reach full performance after a few complete charging and discharging cycles.
- To keep the rechargeable battery in optimum condition, it should be recharged every 3-6 months, especially if it is not being used for a long period of time.
- Always fully charge rechargeable batteries before storage and if the rechargeable battery can be removed, this is advised to avoid battery depletion and avoids the risk of a battery leaking.
- Always protect lithium batteries from heat, intense sunlight, fire, water and moisture – danger of explosion!
- If a battery is damaged, fluids can leak out. AVOID contact as this can lead to skin irritation and/or burns. If skin contact occurs, rinse thoroughly with water. If irritation persists, seek medical advice. Seek immediate medical assistance if lithium battery fluid comes into contact with the eyes.

CHARGING OTHER DEVICES (From Battery Pack Powerbank)


The USB-A port on the battery pack is an output only, for charging other devices (the USB-C port is input only, for charging the internal batteries). To charge a device, such as a smartphone, make sure you use the appropriate type of charging cable for your device. Insert the USB-A end of the cable into the Powerbank and the other end into your device.

The charge process starts automatically. If the charge process does not start automatically, press the power switch. While the Powerbank is charging your device, the charge display LEDs illuminate to indicate the charge capacity of the internal rechargeable batteries. If the LEDs turn off, your device is fully charged, or the powerbanks internal batteries are depleted. The Powerbank switches off automatically after charging is complete. Disconnect your device from the Powerbank once the charge process is complete.

The Battery Pack/Powerbank has intelligent parallel circuitry and can function as a Powerbank using just 1 x 21700 battery inside.


Please Note: this will of course reduce the charging times.

Please Note: that the Powerbank cannot be charged and discharged simultaneously.

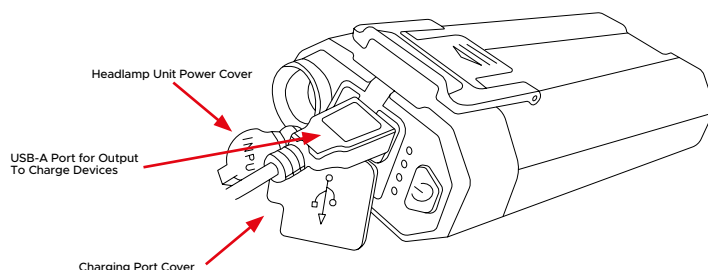

21700 BATTERIES POWER BANK

The 21700 batteries inside the lamp can be removed and used as 1A Powerbanks via the USB-C port. You will need your own devices charging cable for this. Plug the USB-C end of your devices charging cable into the USB-C port. A Blue light will appear on the top of the battery to confirm your device is being charged.

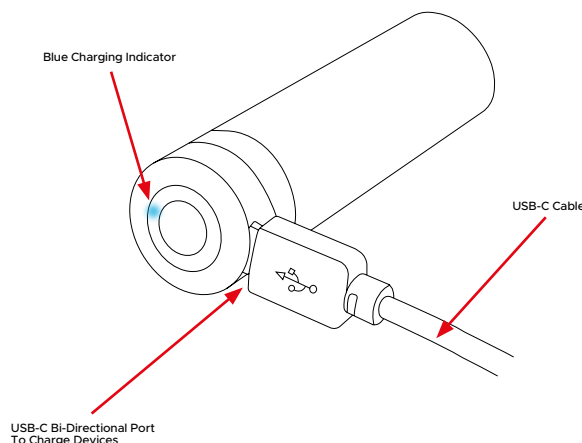

Please Note: charging times will be slower than using both batteries combined inside the battery pack.

- Children under 12 years of age should only use the product under adult supervision.
- Do not disassemble or attempt to modify the product; this will void the warranty and can be dangerous. Improper use or modification is not covered under the warranty.
- Take care not to let lenses come into contact with hard/sharp objects, damage/scratches to lenses will affect light output.
- Before cleaning the product, disconnect the charge cable. Clean with a dry or slightly moist, clean, lint-free cloth and a mild detergent if required. Do not use cleaners that contain abrasives or solvents.
- This product is water resistant to IPX5 – DO NOT SUBMERGE. If the product has been subjected to excessive moisture/water the warranty may be void.
- This product has a 1 year standard warranty (or extended to 2 years once registered online at WWW.UNILITE.CO.UK/WARRANTY) against manufacturing faults and defects. It does not cover normal wear and tear, modifications, accidental damage or poor maintenance. Unilite warranties do not cover disposable battery leaks or the use of incorrect chargers and cables that can damage rechargeable batteries.
- Do not dispose of this device in normal household waste. It must be disposed of via an authorised electrical appliance disposal centre or at your local waste disposal unit.
- Please re-use or recycle packaging responsibly.
- Keep these instructions for future reference or for subsequent possessors.